

**Instruction Sheet
IVP-1 VOLT PEN
Non Contact Voltage Indicator**



Safety Information

Read and understand this instruction manual completely before using this instrument. Failure to observe the warnings and cautions in this instruction manual may result in injury, death or damage to the instrument and other equipment of property.

If this instrument is used in a manner not specified in these instructions, the protection provided by the instrument may be impaired.

Warning

- Examine the instrument before use. Do not use the instrument if it is wet or damaged

- Test on a known live source within the rated ac voltage range of the instrument, both before and after use to ensure that the unit is in good working condition
- Use caution with voltages above 30Vac RMS, 42Vac, or 60Vdc. These voltages pose a shock hazard
- Wear suitable personal protective equipment when working around or near hazardous live conductors which could be accessible
- Use extreme caution when working around bare conductors or bus bars. Contact with the conductor could result in electric shock
- Do not use the instrument in a hazardous area or around explosive gases or vapours
- Only touch the instrument handle above the tactile barrier when carrying out tests. Do not touch the tip of the instrument while testing.
- The instrument may only be used within the operating ranges as specified in the specifications section.
- The instrument can only be used in properly grounded electrical installations.

 
Symbols

The following symbols may appear on the instrument or in the instruction manual.

⚡	Risk of electric shock
📖	Refer to Instruction Manual
DC	Direct Current (dc)
⚡	Equipment protected throughout by double or reinforced insulation
BATT	Battery
FALSE	False
⊕	Earth
AC	Alternating Current (ac)
CE	Conforms to applicable EU directives

Description of Parts

1. Probe tip
2. Tactile Barrier
3. Clip
4. Battery case cover



Operation

- Apply the probe tip to any connection point or move it along an insulated cable
- When an AC voltage is detected, the red indicator in the probe tip will flash and the internal sounder will activate. The pulse rate of the indicator and sounder is proportional to the strength of the electric field detected

Warning

- If there is no indication, voltage could still be present. Electrostatic fields of sufficient strength must be generated to allow the instrument to function correctly. Some factors that may cause weak field strengths include: cable shielding, thick cable insulation, recessed receptacles in sockets. If in any doubt, the voltage should be measured with a suitable instrument
- In 3 phase applications, make sure that all machines are disconnected before testing fuses; if a three-phase machine is connected to the supply and one of the fuses ruptures, the voltage is conducted back to the defective fuse through the other phases and may give a faulty indication of the fuse condition
- This instrument does not provide any indication of the type and level of the voltage present. In case of doubt, the voltage should be measured with a voltage measuring instrument
- When testing mains connected cables for interruptions, the user must ensure that the line under test is connected to a suitable phase (live) supply before testing.

Battery replacement



- Unscrew the battery cover
- Remove discharged battery and insert new one, respecting the correct polarity.
- Close the battery cover carefully.
- If the instrument is likely to remain unused for a long period it is advised to remove the batteries.
- Dispose of the removed batteries in accordance with local regulations.

Note: The condition of the battery should be checked prior to use and changed if necessary.

Maintenance

Do not attempt to repair this instrument. It contains no user-serviceable parts. Repair or servicing should only be performed by qualified personnel.

Cleaning

Periodically wipe the VOLT PEN with a dry cloth, do not use abrasive or solvents.

Specifications

Voltage range: 200 V–1000 VAC
Sensitivity (illuminates at 4mm distance from wire) : 240VAC
Frequency : 45 ~ 60 Hz
Overvoltage category : CAT IV 1000 V
Altitude : up to 2000 metres
Operating Temperature range : 0 ~ +40°C
Humidity : < 80%
Power supply : 2x AAA, 1.5 V LR03
Dimensions : 152 x 22 x18 mm
Weight : approx. 40 gram (incl. batteries)

Measurement Category I is for measurements performed on circuits not directly connected to mains. Examples include: Measurements on battery powered equipment and specially protected (internal) mains-derived circuits.

Measurement Category II is for measurements on circuits directly connected to the low voltage installation. Examples include: Household appliances, portable tools and similar equipment.

Measurement Category III is for measurements performed in the building installation. Examples include measurements on distribution boards, junction boxes, socket-outlets and wiring and cables in the fixed installation.

Measurement Category IV is for measurements performed at the source of the low-voltage installation. Examples include measurements on primary over current protection devices and electricity meters.

Asia

Iso-Tech
460 Alexandra Road, #15-01A
PSA Building
Singapore 119963

Europe

Iso-Tech
PO Box 99
Corby
Northamptonshire
NN17 9RS
United Kingdom

Japan

West Tower (12th Floor)
Yokohama Business Park
134 Godocho, Hodogaya
Yokohama, Kanagawa 240-0005
Japan

USA

7410 Pebble Drive
Fort Worth
Texas 76118-6961

Canada

1701 Woodward Drive
Ste 108 Ottawa
Ontario K2C 0R4, Canada

South America

Av. Pdte. Eduardo Frei M. 6001-71
Centro Empresas El Cortijo
Conchalí, Santiago, Chile